

Nano Vertical Platform Lift

A unique and innovative solution to safely access all levels of a home or business.



ATLAS

A Mobility and Accessibility Manufacturer

Residential and Commercial Vertical Platform lift

The Atlas Nano Vertical Platform Lift is the market's slimmest and most elegant tower design, which means a more attractive look, lower shipping costs and easier installation.

The attractive Nano Vertical Platform Lift has been designed, developed and manufactured to meet the highest safety and security standards in the industry.

PEACE OF MIND


- Easy-Access Automatic Folding Ramp
- Smooth, Quiet and Effortless Ride
- Weather Resistant Materials
- Emergency Stop
- Safety Underpan

EASY INSTALLATION

- Plug-N-Play
- Foldable Car Sling
- Slim, Light Weight Tower
- Troubleshooting test light
- Installation Kit Included

INNOVATIVE DESIGN

- Much Smaller Footprint
- Automotive-Grade Steel
- More Attractive Look
- Up to 64" Lift Height
- Reversible

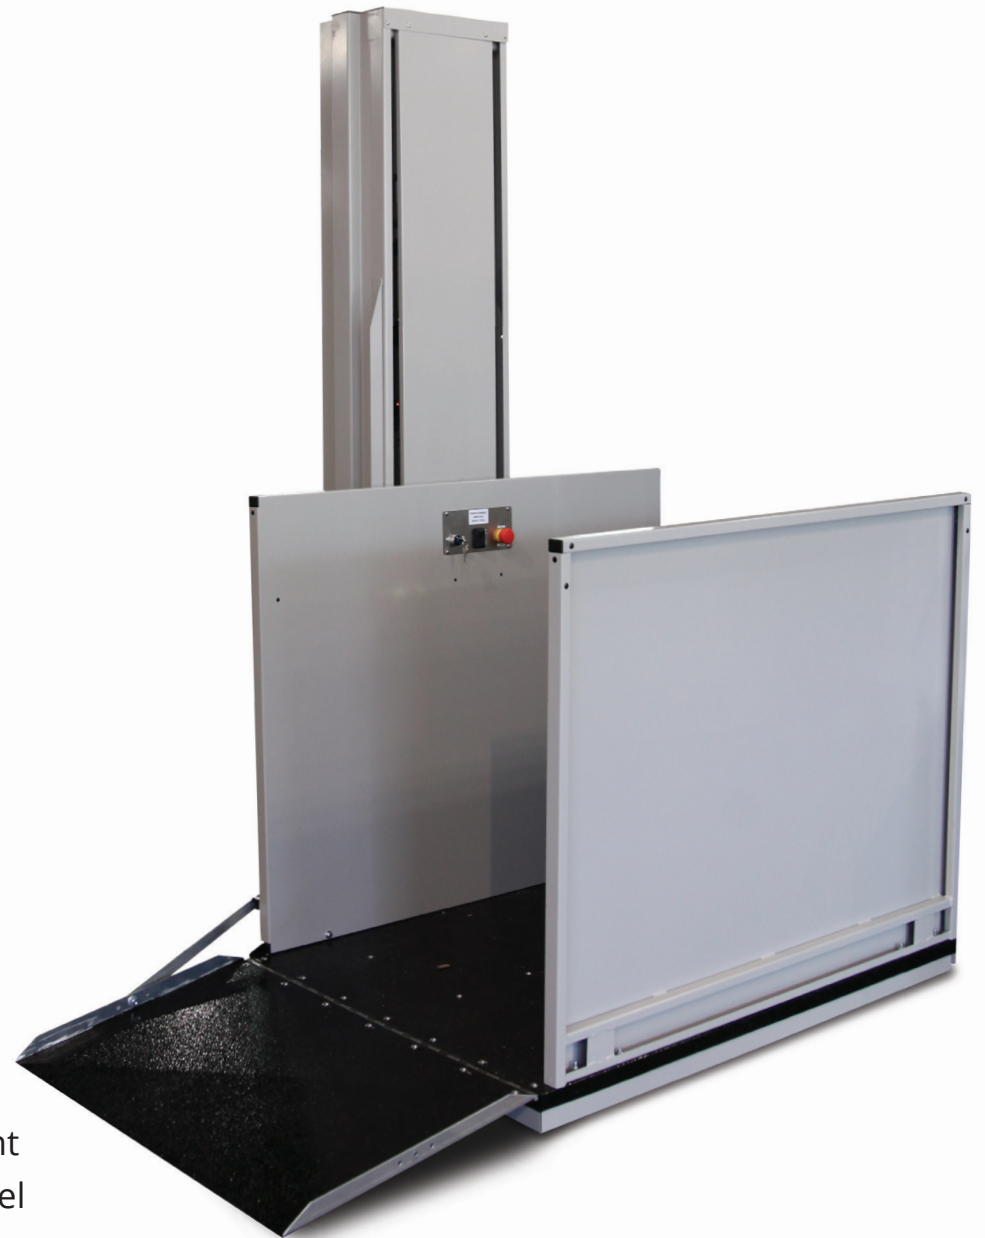

Elegance, Performance and Safety

These standard features come on every Nano. No extra cost, just great value!

Capacity

800
lbs

Drive

ACME
screw drive

Speed

12
FPM

Lifting Height

64
inches

Dimensions

36x54x42
inches

STANDARD FEATURES INCLUDED:

Tower Height

92"

Folding Ramp

24" x 36"

Capacity

800 lbs

Color

Atlas Gray (RAL 7074)

Motor

1 hp, 24VDC motor

Power Supply

120v / 20A (2 x 12v gel batteries)

Safety Standards

ASME A18.1
CSA B44.1 / ASME 17.5-elevator and escalator electrical equipment
ICC A117.1 accessible and usable buildings and facilities (section 410)
Electrical number QAI: E10695

Safety Features

Obstruction sensor
underpan
limit switches
emergency stop
emergency lowering
slip-resistant
key lock controls
brass safety nut

Installation Kit

Conductors
wiring
quick connectors
hardware
shims
touch-up paint

Nano Revolutionary Features

The Atlas Nano Vertical Platform Lift has the more innovative and more standard safety features than our competitors, ensuring your customers the upmost safety and security getting up and down all levels of their home or business.

WHAT MAKES THE NANO DIFFERENT?

Smaller Tower Footprint	Slimmest tower on the market
Quick Ship Available	Steady supply of units in stock allows for quick shipping and installation — sometimes as quick as the next day!
Easy Installation	Self-installation available for convenience
Reversible Tower	Interchangeable sides
Doors and Gates	Wide range of door and gate sizes and finishings
Easy to Use Controls	Flush and surface mounts, call posts, Top Gate Mounted, No Key, Type 455 and Type 2252 (Commercial Kit)
Cabin and Platform	Custom platform sizes and configurations

